



User Manual JQ PRODUCTS THE CAR.

How to place decals correctly on a JQ PRODUCTS THE CAR body.

! Read this instruction fully and carefully before applying any decal !

Please make sure you have the following tools for the best result:

spray bottle with a mixture of water and a few drops of dish wash soap liquid	
hairdryer gun with preferable two heat settings	
sharp hobby knife	
sharp scissor	
body reamer	
credit card (size of plastic)	
roll of paper kitchen towel	

CUSTOM RACING DECAL's are printed on industrial high quality self-adhesive polymer vinyl of 80 micron thickness.

A 80 micron thick high gloss polymer lamination layer protects the vinyl against mechanical damage and UV rays.

What do you need to Mount the decals correctly?


- * Patience and precision.
- * A clean surface of the object.
- * Clean hands.

How to get started the right way:

JQ PRODUCTS THE CAR kit version:

The JQ PRODUCTS THE CAR kit version body decals exist of 7 panels.

The panels should be placed in the following order to make sure the decals will be overlapping at the right spot and direction.

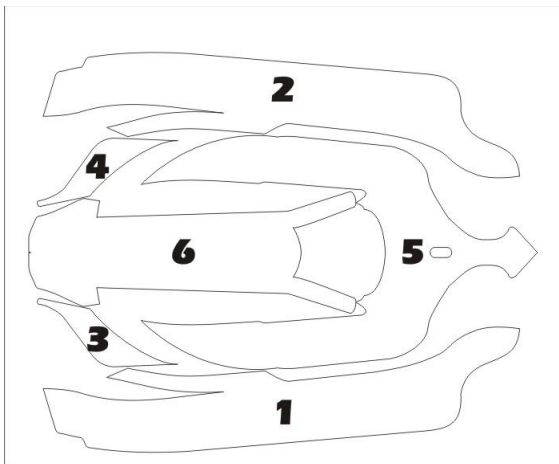

Make all holes in the body for the tank, engine, antenna, bodyposts etc. but do not cut the outlines of the body it selves yet.

Remove the paint cover foil from the body.

1] Clean the body with isopropyl alcohol (or water and dishwashing soap mixture) to remove any greasy additive.

2] Remove the decal from the carrier sheet.

3] Spray the decal and the surface of the body with the spray bottle.

4] Position the decal as much as possible directly at the right spot and press is lightly on the body. Check if the position is correct, when it is not correct the position.

5] Rub the decal from the center to the edges carefully to remove water and air in the same time to fix the decal.

6] If all decals are placed you can use the hairdryer to enhance the adhesion of the decal.

7] If air bubbles cannot be removed by rubbing take a pin and press a little hole in the air bubble. Rub the air/water to the pin hole so it can escape.

8] After 24 hours check if all parts of the decal especially the edges are adhered to the body correctly. If not use the hairdryer and your fingers to press the edges or parts again.

Before you start take a piece of rest material of the carrier sheet and try to mold the vinyl in cold and warm conditions to get known to its behavior.

Take the carrier sheet with the decals.
Spray a thin layer of the prepared soap water over the decals surface.
This is to remove static electricity when you remove the decal from the carrier sheet.

Panel 1

Spray a thin layer of the prepared soap water over the side of the body the decals are placed at.
Take panel 1 and place it best as possible at the body corner and following the shape of the body lines as shown in the picture.

Make sure the edge of the panel is 0,5 to 1 mm over the body lines.



Now from the top edge of the panel fix it by hand rubbing and if needed the hairdryer.
Rub in to the direction of the bottom of the body and stop at the ridge. Use the white lines for the good direction of rubbing.
Once the part up to the ridge is adhered OK work your way further to the bottom and the front and rear.

The part with the red dot we adhere later and place it like the picture shows.



Panel 2

Place panel 2 and rub it on its correct spot.
Use the hairdryer to fix the panel 2 at the edges.



Now adhere the left over part of panel 1.



The right hand side ready.



Perform the same steps for panel 3 and 4 and this is what you get.



Panel 5

Take panel 5 from the carrier sheet and first align the body post hole. Then align panel 5 correctly so it sits evenly on the body (you can use the window bars as reference). Adhere the part around the body post first and work towards the nose and higher edge. Make sure all air and fluid are removed before you start with the other parts of panel 5.



At the right hand side adhere the red spots and make sure the decal follows a horizontal line along the window.
Then adhere the rest of this part of the panel outward to the edges.



First adhere the red spots and work your way to the inside along the ramp in de direction of the white arrow.



Whit some rubbing and the use of the hairdryer move your way to the rear and mold the panel over the ramp in the direction of the white arrow. If there are small wrinkles take the panel back off a little and try again with the hairdryer.

!Always when you reposition the panel let it cool down first otherwise you deform the panel.



Perform the same steps for the left hand side of the body.



Panel 6


Place panel 6 so it is running parallel and evenly over the roof and the small v shape cutout is at the center at the edge of the rear side of the body.



Adhere the center first and move your way to the front and the edges following the white lines.



The last part of panel 6 adhere it in the direction of the white lines to the outside.
The use of the hairdryer is advised.

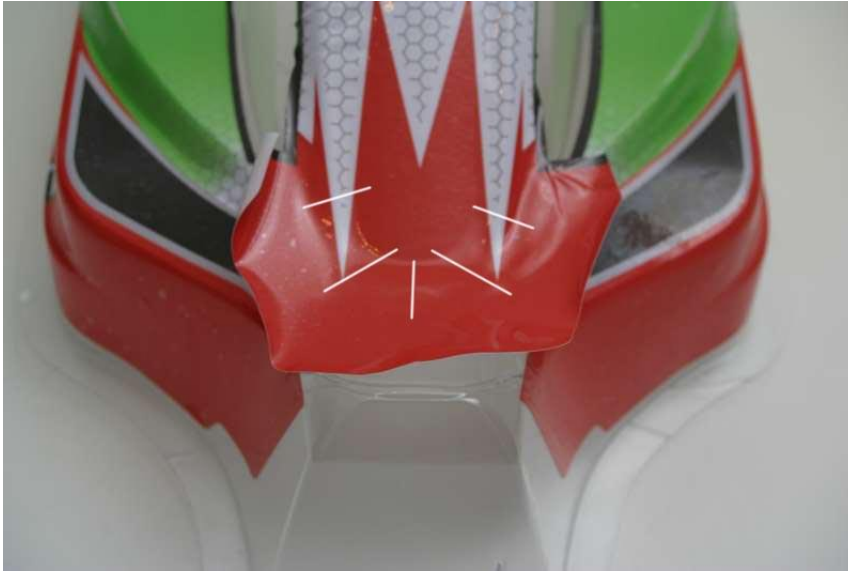

Adhere the front window bars.



Place panel 7 and 8 at each side of the body. You have to cut them at the correct length yourself with a scissor.



Leave the body for 24 hours untouched so the adhesive can bond properly to your body.

Now as final work take the hair dryer and warm up all edges and press them once again.

Let the body cool down 1 hour and cut the body to the appropriate outlines pressed in the body.

Mount the body to the car and enjoy your (first?) decal body.

For maintenance use a soft piece of cloth to remove dirt.

If in need, you can use soap water to remove grease.

Your decals are water, oil and nitro proof but prevent to use aggressive cleaning liquids or high pressure devices at the edges to clean the decal surface.

Enjoy our products.

CUSTOM RACING DECAL